

Cylindrical Aboveground & Underground Passive Grease Interceptors

HT-2899



Highland Tank[®]

Customized to Meet Your Application




Passive Grease Interceptors (PGI) help FSE and food production/processing industries comply with the EPA Sewer Pretreatment Regulations. PGIs are high-performance gravity grease

interceptors designed to intercept and remove large quantities of sewer clogging FOG and oily food waste before it is discharged in a municipal wastewater treatment system.

Unmatched Quality & Service



How Our Passive Grease Interceptor Works

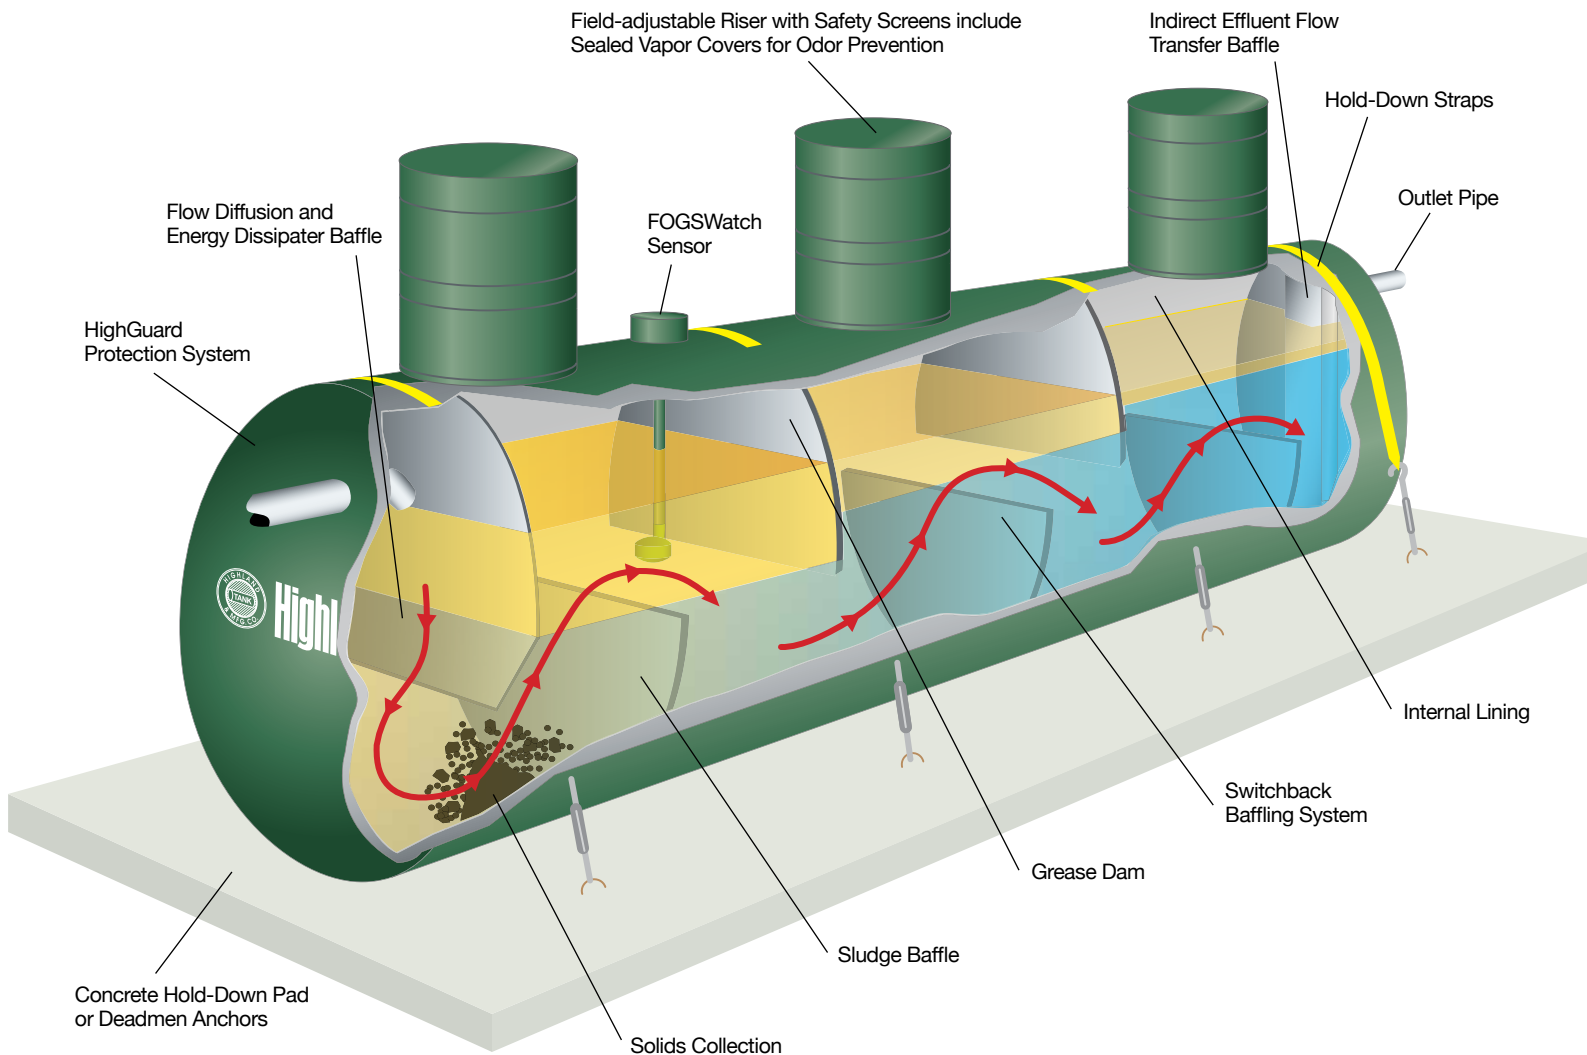

PGI sizing and construction conforms to recognized plumbing codes and meets or exceeds most municipal FOG discharge requirements. They can be sized for greater volumes, storage capacity and even retention times up to 30 minutes.

We construct our standard PGIs from mild carbon steel, meeting ASTM specifications, for superior structural strength and impermeability.

Unlike old-style concrete or fiberglass interceptors, Highland Tank's PGIs don't crack, leak or collapse under hydrostatic pressure. And unlike many competitive units, they're water tight and pressure testable for leaks in both the factory and the field.

Advanced Corrosion Protection

Factory and Steel Tank Institute specifications are followed to assure complete internal and external corrosion protection. We offer complete interior/exterior grit blast and finish coatings, including Highland Tank's HighGuard UL-1746 approved protective polyurethane coating. An additional acid-resistant internal polyurethane lining assures years of continuous service.

Design Options


Stainless steel construction is a valuable option. Stainless steel is inherently corrosion resistant and has high mechanical properties. In many cases, it is preferred due to its appearance and durability.

Aboveground and underground cylindrical interceptors can be custom designed for you to tailor volumes, compartments, inlets, outlets or baffles to satisfy specific code requirements.

Large, outdoor gravity grease interceptors effectively separate FOG and kitchen waste from wastewater. They reduce the risk of sewer clogging and potentially dangerous and damaging sanitary sewer overflows because they provide longer retention time and storage volume.


Pre-Engineered Design Options

Single-basin interceptors have a single collection chamber and a sludge baffle to remove FOG and solids. This is our simple grease and garbage “knock-out” design.

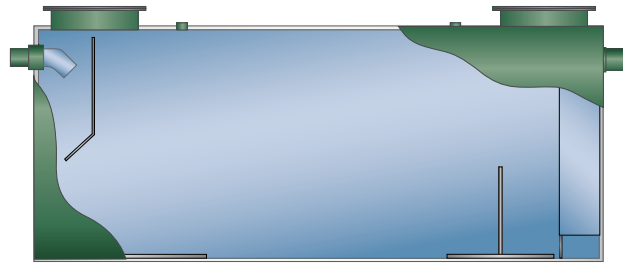


A Simple "Knock-Out" Interceptor

Double-basin interceptors have two collection chambers and a sludge baffle. Our most popular design conforms to IAPMO/ANSI Z1001-2007.

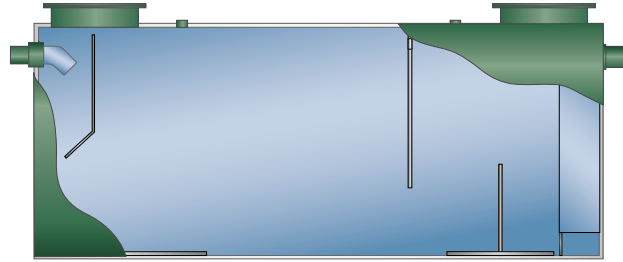

Meets UPC requirements for Gravity Grease Interceptors

Triple-basin interceptors have three collection chambers and a sludge baffle. FOG and solids are trapped in the first compartment and any remaining grease is trapped in the second compartment. The third chamber can be modified and equipped with an effluent pump system when gravity flow to the sewer is not an option.

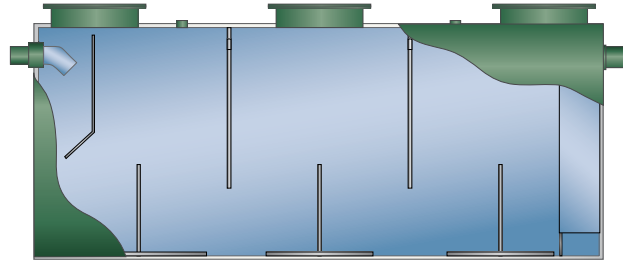

Approved - Washington Suburban Sanitary Commission (WSSC)

PGIs are approved in many states and municipalities. Custom designs are available to meet AHJ requirements.


Consult a local Highland Tank representative for more information.

Construction Options

- Aboveground or Underground
- Stainless Steel Construction
- Double-Wall Secondary Containment
- Stackable Risers and Covers - can be modified in the field to allow for easy installation
- Manway Extensions
- Large EZ-Access Manways
- Grade-Level Manways
- Saddles or I-Beam Supports
- Deadmen Anchoring System
- FOGSWatch Monitoring System
- Effluent Filters
- Influent or Effluent Pump Systems



Passive Grease Interceptor Sizing Guide

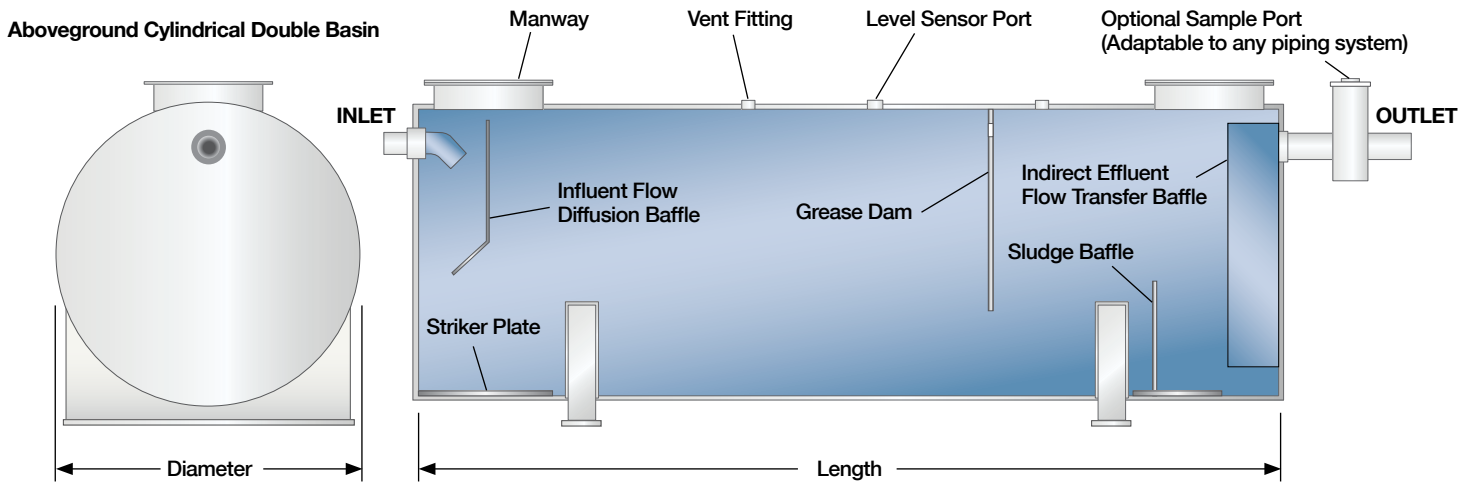

Total Volume Gallons	Operating Grease Volume Gallons / Pounds	Dimensions		Inlet & Outlet Diameter
		Diameter	Length	
†*240	63.4 / 483	3'-2"	4'-0"	4"
†*300	76.4 / 581	3'-2"	5'-0"	4"
†*350	117 / 889	3'-6"	5'-0"	4"
† 550	137 / 1,041	3'-6"	7'-9"	4"
† 750	190 / 1,444	3'-6"	10'-9"	4"
† 1,000	246 / 1,875	4'-0"	10'-9"	4"
† 1,250	319 / 2,431	4'-0"	13'-9"	4"
†1,500	403 / 3,065	5'-4"	9'-0"	4"
†2,000	514 / 3,906	5'-4"	12'-0"	4"
†2,500	643 / 4,886	5'-4"	15'-0"	4"
†3,000	771 / 5,861	5'-4"	18'-0"	4"
†4,000	1,028 / 7,817	5'-4"	24'-0"	4"
†5,000	1,245 / 9,464	6'-0"	23'-10"	6"
6,000	1,497 / 11,383	6'-0"	28'-8"	6"
7,000	1,847 / 14,040	7'-0"	24'-4"	6"
8,000	2,666 / 20,264	7'-0"	28'-0"	6"
9,000	2,349 / 17,858	8'-0"	24'-0"	6"
10,000	2,611 / 19,842	8'-0"	26'-8"	6"
12,000	3,133 / 23,811	8'-0"	32'-0"	8"
15,000	5,000 / 37,996	10'-0"	25'-6"	8"
20,000	5,413 / 41,140	10'-6"	31'-0"	8"
25,000	6,544 / 49,738	10'-6"	38'-9"	8"
30,000	7,580 / 57,606	10'-6"	46'-6"	8"
40,000	10,035 / 76,369	12'-0"	47'-6"	8"
50,000	12,570 / 95,538	12'-0"	59'-6"	8"
60,000	15,160 / 115,216	13'-0"	60'-6"	8"

Approved by the IPC, UPC and state plumbing codes. Contact your local Highland Tank representative for assistance with the local Authority Having Jurisdiction (AHJ) regulations.

Standard Features

- Rugged protected steel construction for superior structural strength
- Factory welded inlet, outlet, transfer pipes and baffles
- Exterior polyurethane coating provides corrosion protection
- Acid-resistant internal polyurethane lining to protect against hydrogen sulfide damage
- Light color interior coating for ease of inspection
- Smooth, interior lining makes pump-outs and cleaning easier
- Factory-mounted on structural steel skid for bolting to pad
- Hinged vapor-sealed covers for easy access, inspection and maintenance
- Factory-tested for tightness

* Available as single-basin ONLY with one manway, all others have one manway per basin.

†IAPMO UPC Approved. Gravity Grease Interceptor (GGI) sizing and construction is consistent with industry protocol for complying with the sewer pre-treatment regulations. GGI sizing is based on 30-minute retention time. Consult Highland Tank for alternate sizing methods.



Please visit us at www.highlandtank.com

One Highland Road
Stoystown, PA 15563
P: 814-893-5701
F: 814-893-6126

4535 Elizabethtown Road
Manheim, PA 17545
P: 717-664-0600
F: 717-664-0617

958 19th Street
Watervliet, NY 12189
P: 518-273-0801
F: 518-273-1365

2700 Patterson Street
Greensboro, NC 27407
P: 336-218-0801
F: 336-218-1292

2225 Chestnut Street
Lebanon, PA 17042
P: 717-664-0602
F: 717-664-0631

1510 Stoystown Road
Friedens, PA 15541
P: 814-443-6800
F: 814-444-8662